

N Scale AC6000 Shell Removal

*** This Guide Is For Item Numbers That Begin with a "6" ***



Step 1: Remove the couplers.



(Hint: You may need to use a set of curved tweezers to pull the screw out. Also, when pulling the coupler out and away from the chassis try to pinch it in a way that will not allow the coupler pocket to come apart. Re-assembly can be difficult)



Step 2: Hold the model upside down by the fuel tank and press down on the bottom edge of the walkway.



Alternate to the other side and do the same thing.



Be aware of the lighting harness that is connected to the cab. You do not want to pull the shell off too fast or with too much force, else these wires can break.