

## PRR P5a Default Function Key Settings:

F0	Front Light/Rear Light
F1	Diesel Bell
F2	Diesel Horn
F3	Coupler Slack. (Couple when moving)
F4	Compressor. (Electric arc sounds when moving)
F5	Ramp Traction Motors Up
F6	Ramp Traction Motors Down
F7	Pantograph Up/Down Sounds
F8	Volume/Mute
F9	Startup/Shutdown
F10	Cooling Fans
F11	Air Filling/Air Release
F12	Brake Set/ Brake Release/Brake Squeal
F13	Grade Crossing Horn
F14	Passenger Announcements
F15	Freight Announcements
F16	Maintenance Related Radio Chatter
F17	Radio Related Radio Chatter
F18	City Related Radio Chatter
F19	City Related Radio Chatter
F20	Industrial Background Sounds
F21	Lumber Background Sounds
F22	Toggle Primary and Secondary Horn
F23	Track Sounds
F24	Not Used
F25	Long Horn
F26	Play Recorded macro
F27	Macro Recorder Start/Stop
F28	Brake Squeal