



How to install the ATC detail part onto the pilot truck of the Blue Goose:

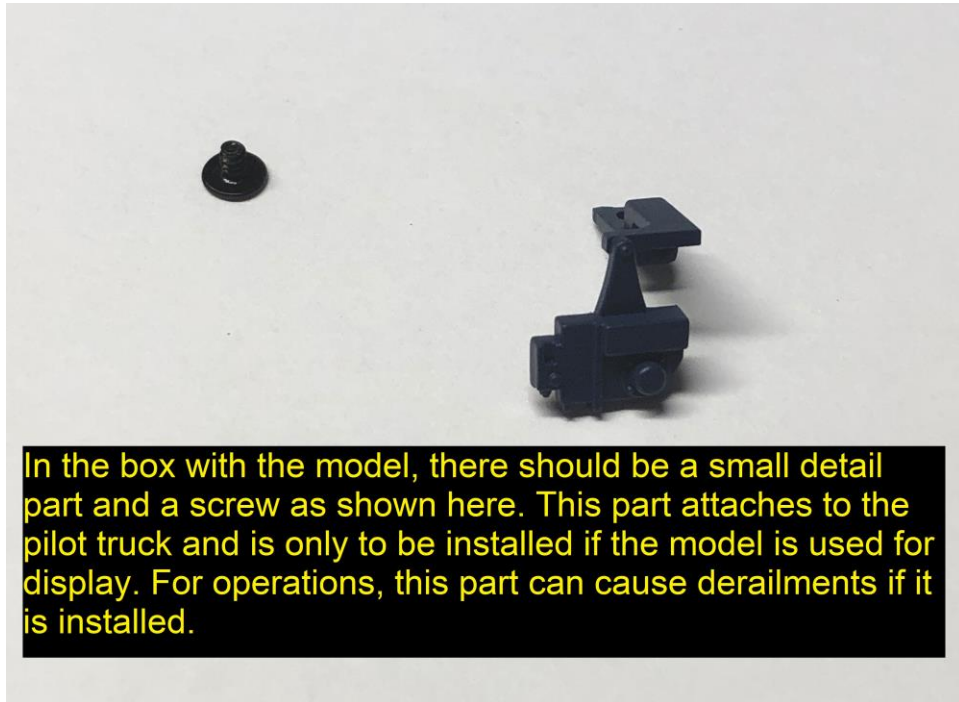

Install the part on the pilot truck as shown here.

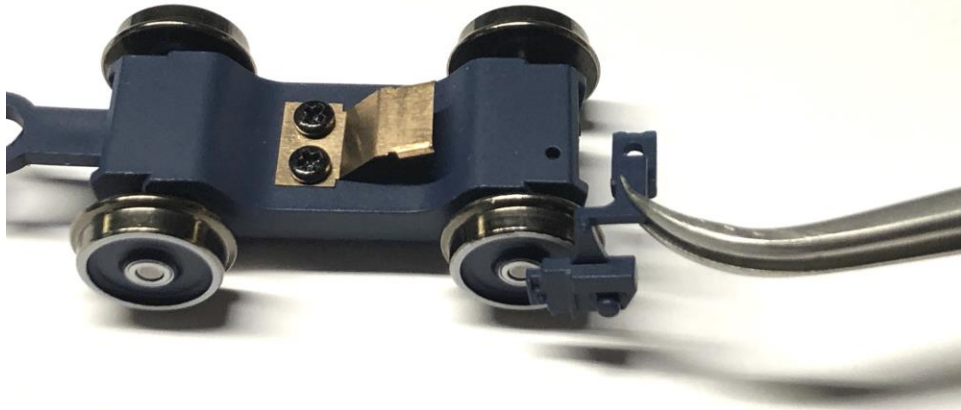



Re-install the pilot truck, and the finished product should look like this.

(Note: If your detail part has a small ring on it as shown here, it is from the parts tree and should be cut/clipped off):

