


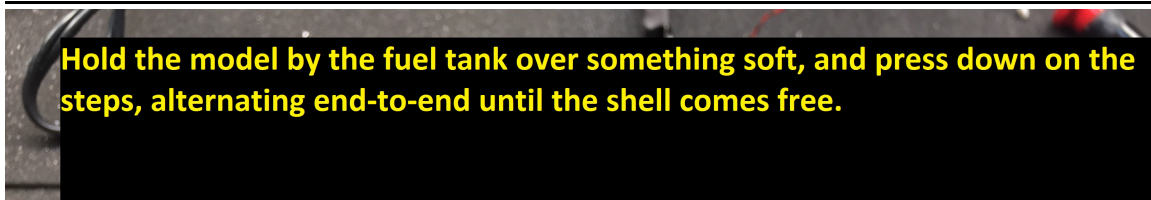


## **HO AC6000 GoPack! Installation**

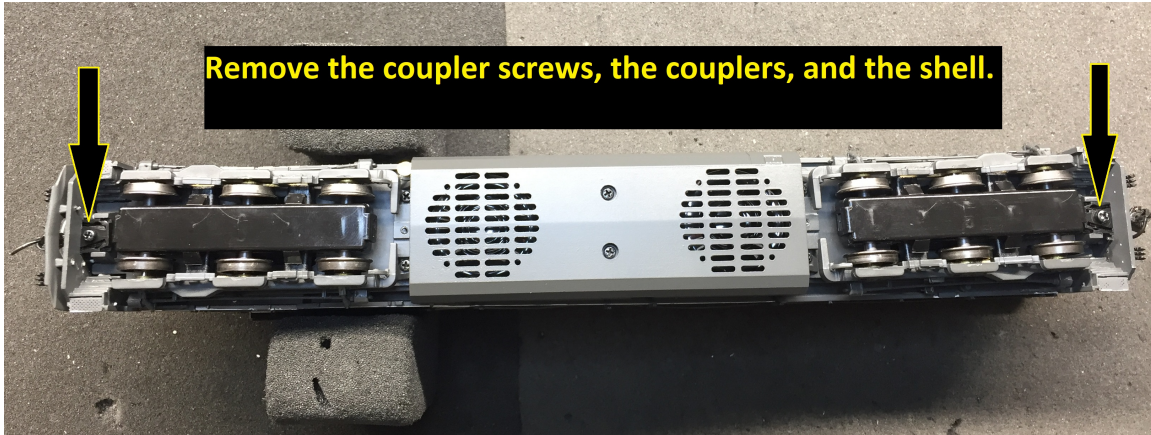


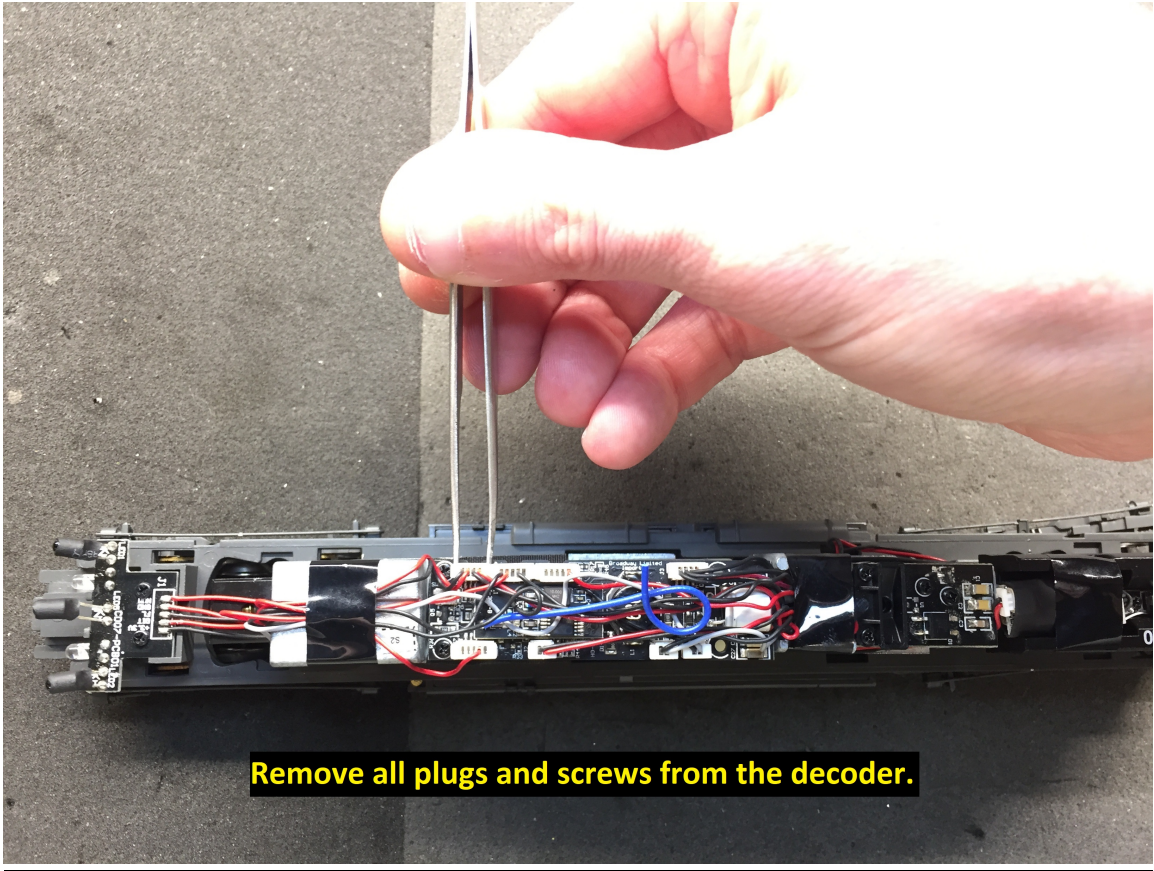


**Remove all plugs and screws from the decoder.**

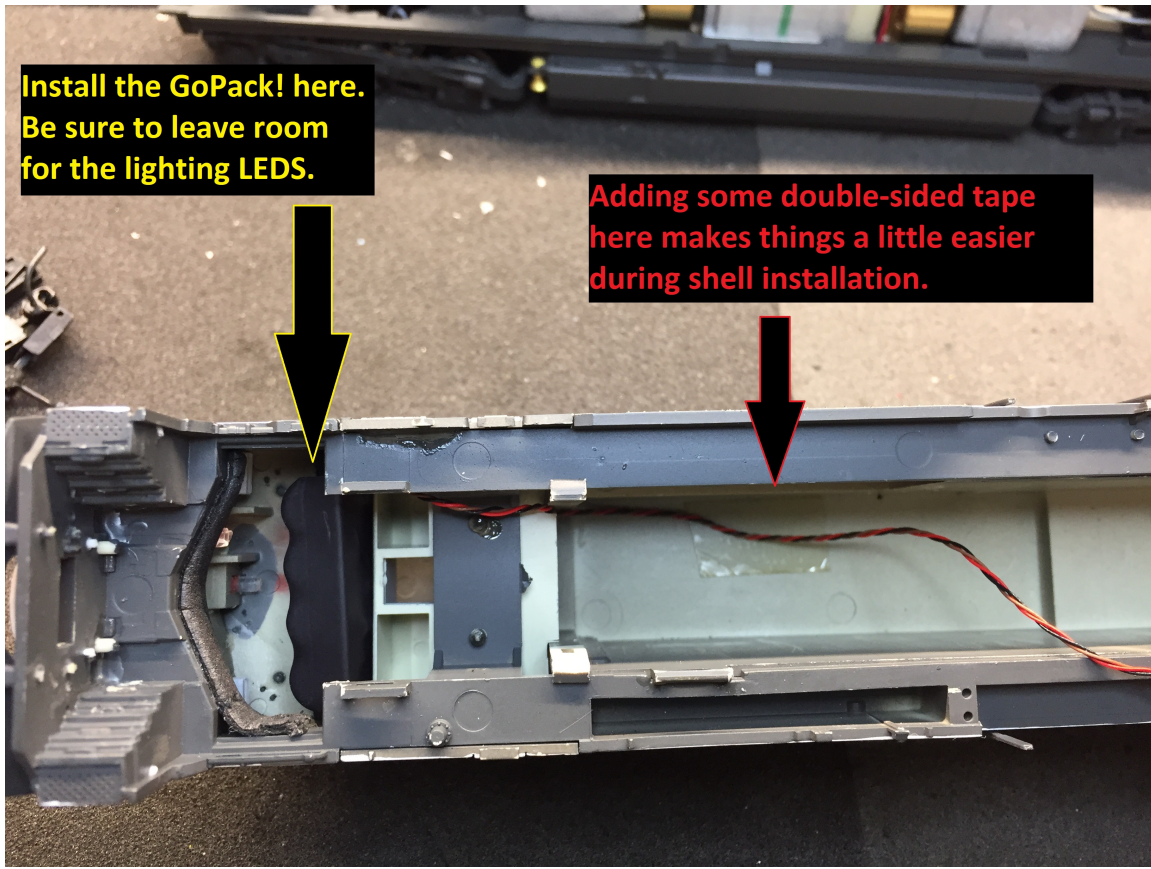

## Install the Rev H Decoder

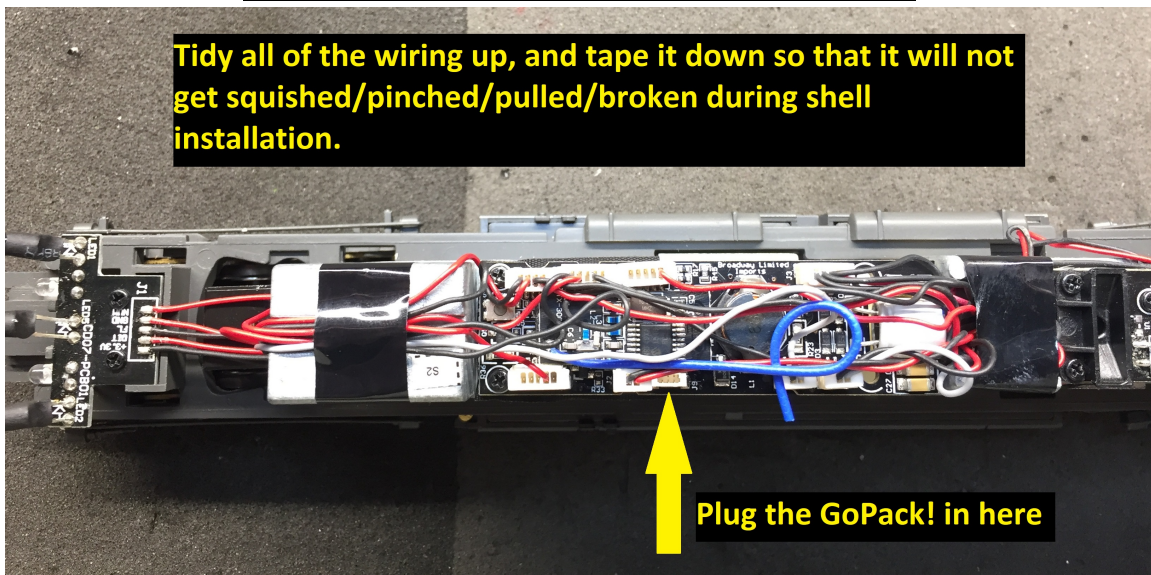

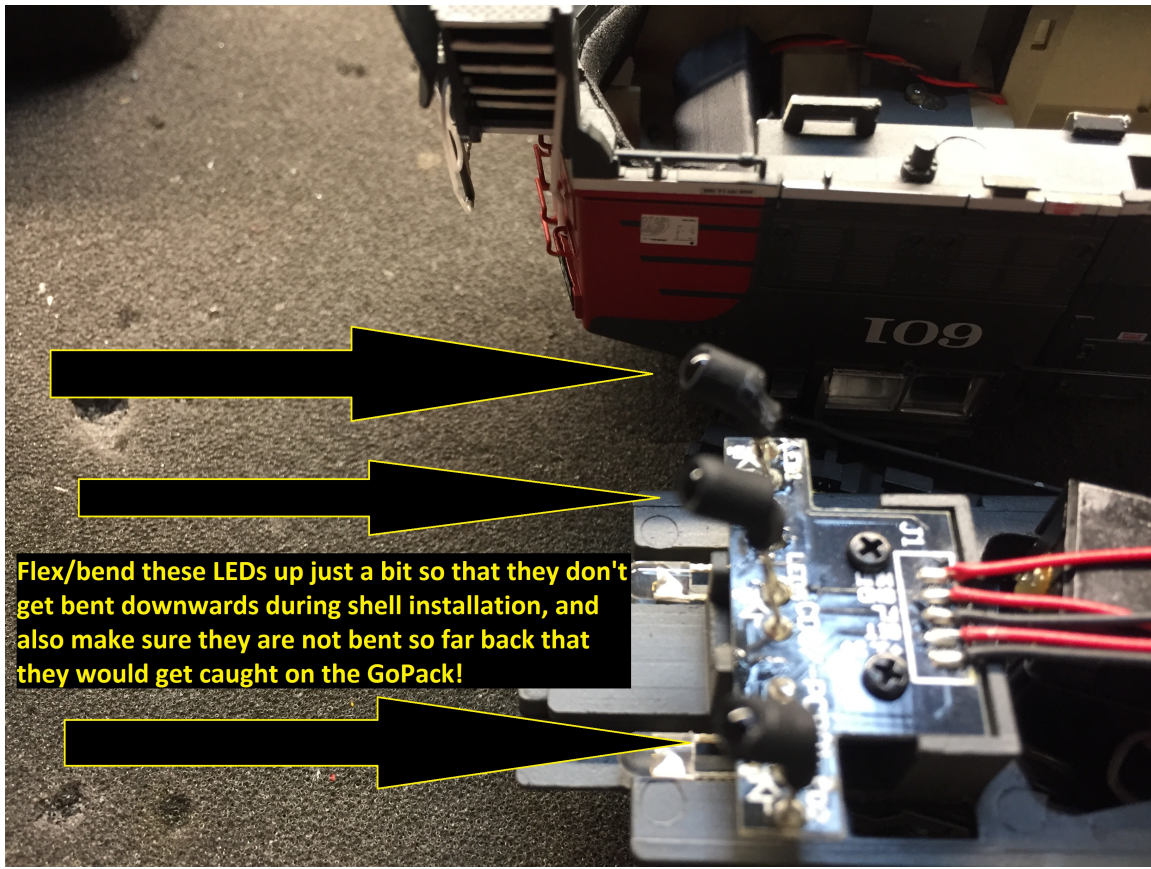

**Hold the shell upside down in one hand, and insert the chassis with the other (headlight/ditch lights first). Insert the couplers and screws, and then test the model on the layout.**